

Justick™ Board Care and Cleaning Instructions

Justick™ boards are meticulously made with the highest quality, non-porous materials which makes the patented Justick™ surface hygienic and easy to keep clean.

Our revolutionary technology has been tested and perfected to ensure quick and effortless cleaning without the need for chemicals.

Listed below are the instructions for cleaning of the Justick™ Surface (where material is adhered to) and the Overlay (if you opted for the interactive option).

Justick™ Surface Care

After extended use adhesion can be affected. This is absolutely normal.

To clean your Justick™ surface, disconnect the batteries and/or AC adaptor.

In most cases the board can be wiped with a dry cloth or damp cloth without the use of chemicals – microfiber cloths are ideal.

To remove stubborn, oily or greasy marks use a lukewarm unscented dishwashing soap solution and then ensure that the surface is wiped clean with a damp cloth. **Avoid** cleaning solutions which contains anti static ingredients like window cleaners.

Wipe the panel with a clean dry cloth and then allow to air dry for a further 3 minutes or until there is no moisture on the panel.

Ensure that the surface is completely dry before reconnecting the batteries and/or AC adaptor. Adhesion will return to normal after a few minutes.

Never expose your Justick™ product to direct sunlight or high temperatures. This could damage the product.

Justick™ Overlay Care

Only use non-permanent whiteboard markers on the Clear View Dry Erase Overlay and use a regular whiteboard eraser to clean.

Should it be necessary you may clean with a damp cloth, ensure that the overlay is dry before writing.

For more stubborn marks any standard household cleaner can be used, ensure that the overlay is dry before writing.

For those in a **Healthcare environment** where disinfecting is a requirement, you can use most standard healthcare disinfectants on the surface and on the overlay.

If you are unsure, please test the chemical on a small discreet part of the board and follow the cleaning and care instructions above.

WARNING:

- Should any part of your Justick™ product show signs of damage, immediately unplug the AC Adaptor and/or remove the batteries and discontinue use.
- This product is not intended for use by children under five years of age.
- To avoid danger of suffocation keep the plastic bag the board was shipped in away from children and ensure that batteries, screws and other small parts are kept out of reach.